


QUICK INSTALLATION GUIDE

Viking Components 56K/33.6K PC Card Modem (Windows 98 & 95)

HARDWARE INSTALLATION

The hardware installation is the same for all operating systems.

1. Locate the PCMCIA (PC Card) Type II slot on your system. If you are not familiar with its location, please refer to your computer's "Owner's Guide." Also it is recommended to read any additional information in your system's "Owner's Guide" regarding the PCMCIA (PC Card) slots.

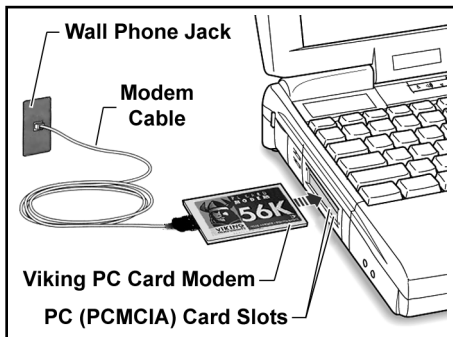

2. With your computer on, insert the Viking fax/modem card into the desired (PCMCIA) PC Card slot (either the upper or lower). Insert the corresponding end of the supplied cable into the your wall phone jack and the other end of the cable into the Viking modem.

SOFTWARE INSTALLATION

For Systems Using Windows 98:



1. You will be prompted with the "New Hardware Found" message. Then "Add New Hardware Wizard" window will appear. Click the "Next" button.

2. A new message inside the "Add New Hardware Wizard" window will read "What do you want Windows to do?" Select "Search for the best driver for your device. (Recommended)." Then click the "Next" button.

3. Select "Floppy disk drives." Insert the Viking modem driver diskette that was supplied with your modem into the floppy drive. Then click the "Next" button.

4. The bottom of the next window will show your drive A:\ or diskette drive as the location of the modems driver. Click the "Next" button.



5. The final message in the "Add New Hardware Wizard" should show your new Viking modem at the top, for example: Viking V.90+K56Flex PC-Card Modem. A message "Windows has finished installing the software that your new hardware device requires" should also appear. Click the "Finish" button.

Your installation is now complete.

Note: The Viking V.90+K56Flex PC-Card Modem and its driver were used for example only and may not reflect your Viking Modem.

For Systems Using Windows 95:

1. You will be prompted with the "New Hardware Found" message. Click the "OK" button.

2. The "Update Device Wizard" window will appear. Insert the Windows 95 drivers diskette that was included with your modem. Then click the "Next" button.

3. Make sure that your floppy disk drive is selected for the location of the driver.

4. Note that the "Device Found" has changed from Standard PCMCIA Card to the Viking PC Card Modem. Then click the "Finish" button.

Your installation is now complete.



For Other Operating Systems:

Please refer to the supplied "Viking Components 33.6K/56K User's Guide" pages:

- Windows NT 4.0 - pages 16-17
- Windows CE - page 15
- Windows 3.x - page 9

ADDITIONAL INFORMATION

The following information can be found in the supplied Viking "User's Guide": specifications, requirements, cellular driver installation, technical notes, troubleshooting, basic AT Commands, modem drivers, firmware upgrades, contacting technical support, communication regulations and warranty.

